


SAMSUNG Galaxy Tab A nook™ Quick Start Guide



Key Features

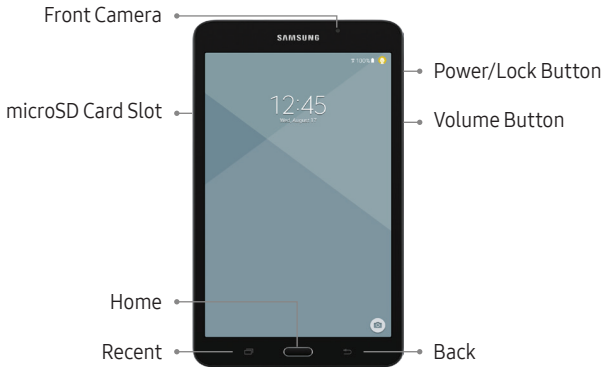


Headset Jack

USB/Charger Port

Speaker

Back Camera

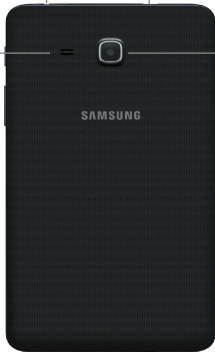

Basic Functions

Charge the Battery

Before turning on your NOOK™ tablet, charge it fully.

Your tablet comes with a charger and a USB cable. Plug the smaller end of the cable into the USB/charger port on your NOOK tablet and the larger end into the charger. Then plug the charger into an electrical outlet to charge the NOOK tablet. Use only charging devices and batteries approved by Samsung. Samsung accessories are designed for your device to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.



Turn Your Device On and Off

- ◆ Press and hold the **Power/Lock** button to turn On.
- ◆ Press and hold the **Power/Lock** button to turn Off.

Initial Device Configuration

1. Select a language and tap **START** or tap **ACCESSIBILITY**.
2. Follow the prompts to complete the set up process.

Lock and Unlock Your Device

To lock your device screen:

- ◆ Press **Power/Lock** button.

To unlock your device from the lock screen:

- ◆ Press **Power/Lock** button then swipe your finger across the screen.

Customize Home & Lock Screen




Change Wallpaper and Add Widgets

Change the look of the Home and Lock screens with Wallpaper.




- ◆ Touch and hold a blank space on a Home screen to access options.
 - **Wallpapers:** Change the look of the Home and Lock screens.
 - **Widgets:** Widgets are self-contained apps that run on a Home screen. Select a widget for quick access to applications.

Connect to Wi-Fi and Bluetooth

Connect to Wi-Fi

1. From the Home screen, tap  **Apps** →  **Settings** →  **Wi-Fi**.
2. Tap **On/Off** to turn on Wi-Fi®.
3. Tap a network, enter the password if prompted, and tap **CONNECT**.


Connect to Bluetooth



1. From the Home screen, tap  **Apps** →  **Settings** →  **Bluetooth**.
2. Tap **On/Off** to turn on Bluetooth®.
3. If necessary, tap **SCAN**.
4. Tap a device from the list to initiate pairing. The devices automatically pair once the external device accepts the connection.

Use the NOOK

Start Reading

Find all your NOOK content, like books and magazines, in your NOOK Library.

1. From the Home screen, tap  **Apps** →  **NOOK Library**.
2. Tap a cover of the book or any item to open it.


Note: If you did not sign in to your NOOK account during initial setup, tap  **Apps** →  **NOOK Home** and create or sign in to your account.

Change Text Size in a NOOK Book®

1. Tap the center of the screen to bring up reading tools while a book is open.
2. Tap on the **(Aa) Font** icon at the top of the screen.
3. Select your preferred text size, font style, line spacing, and other customizable options for your best possible reading experience.

Shop for New Content



Browse and purchase your favorite books, magazines, newspapers and kids' books from the NOOK Store®.

1. Make sure you are connected to Wi-Fi.
2. From the Home screen, tap the  **NOOK Shop** icon.

You can scroll through recommendations on the first screen of the NOOK Shop, browse by categories or search for a specific title, author, or topic.


Once a valid credit card is saved to your NOOK account, you can make purchases with just a couple of taps by following the prompts.

Download Apps



1. From the Home screen, tap  **Apps** →  **Play Store**.
2. Select a category and content, then follow the prompts to download.

Email Account

Gmail


- ◆ From the Home screen, tap **Google** folder →  **Gmail**.
 - Tap **Add an email address** to create a new account or to log into an existing Gmail™ account.
 - Tap **TAKE ME TO GMAIL** if you have an account setup on your device.

Set up Your Email Accounts



1. From the Home screen, tap  **Apps** →  **Email**.
2. Enter your email address and password, then tap **NEXT**.
3. Follow the prompts to complete setup.

Install Apps from Google Play Store


Download Apps

1. From the Home screen, tap  **Apps** →  **Play Store**.
2. Tap an app you want to download and tap **INSTALL** or the **app's price**.

Uninstall Apps

1. From the Home screen, tap  **Apps** → **EDIT** → .





Note: Apps that can be uninstalled or turned off display .

2. Tap  and follow the prompts to either uninstall or turn off the application.





Note: Before you can access Google™ applications, you must sign into or set up a new Gmail account.

Camera and Video

Take a Photo



- ◆ From the Home screen, tap  **Apps** →  **Camera**.
 - Tap  **Camera** icon to take a photo.
 - Tap  **Selfie** icon to take self portraits.
 - Tap **MODE** to select camera shooting modes.

Take a Video

- ◆ From the Home screen, tap **Apps** →  **Camera**.
 - Tap  **Record** to begin recording.
 - Tap  **Pause** to pause a recording.
 - Tap  **Stop** to finish recording a video.


Gallery

Launching Gallery displays available folders. Folders are automatically created to make it easier to organize your pictures.

1. From the Home screen, tap  **Apps** →  **Gallery**.
2. Tap the drop-down menu in the upper left corner, and then tap an option to sort folders.
3. Tap to open an album or folder and then tap an image or video to view.
4. Swipe left or right to view the next or previous image or video.

Internet

Launch the internet to view the latest news, get weather updates and follow your stocks.

1. From the Home screen,  **Chrome**.
2. Type the website address in the URL field and tap **Go** on the keyboard.

Navigation

- **Go back:** Tap the ← arrow.
- **Go forward:** Tap the → arrow.

NOOK Support

For additional assistance and information, please refer to the comprehensive User Guide found in the NOOK Library on your device as well as on **NOOK.com** and **Samsung.com**. You can also contact Customer Service at **1-800-THE-BOOK** to speak with a Customer Service Representative.